

## 57mm Coilnailer

### Parts Reference Guide

Guía de referencia  
de piezas

Pièces Guide  
de référence






Schematic Drawings Inside  
Plano esquemático en el interior  
Schéma intérieur

**Repair Kit  
YK0446**


# SENCO®

Tool # # de herramienta N° de l'outil	Model Modelo Modèle
PAL57F	Flat Coil

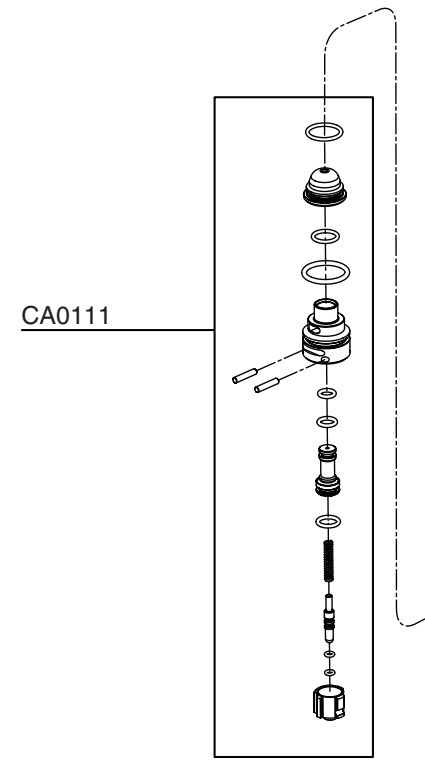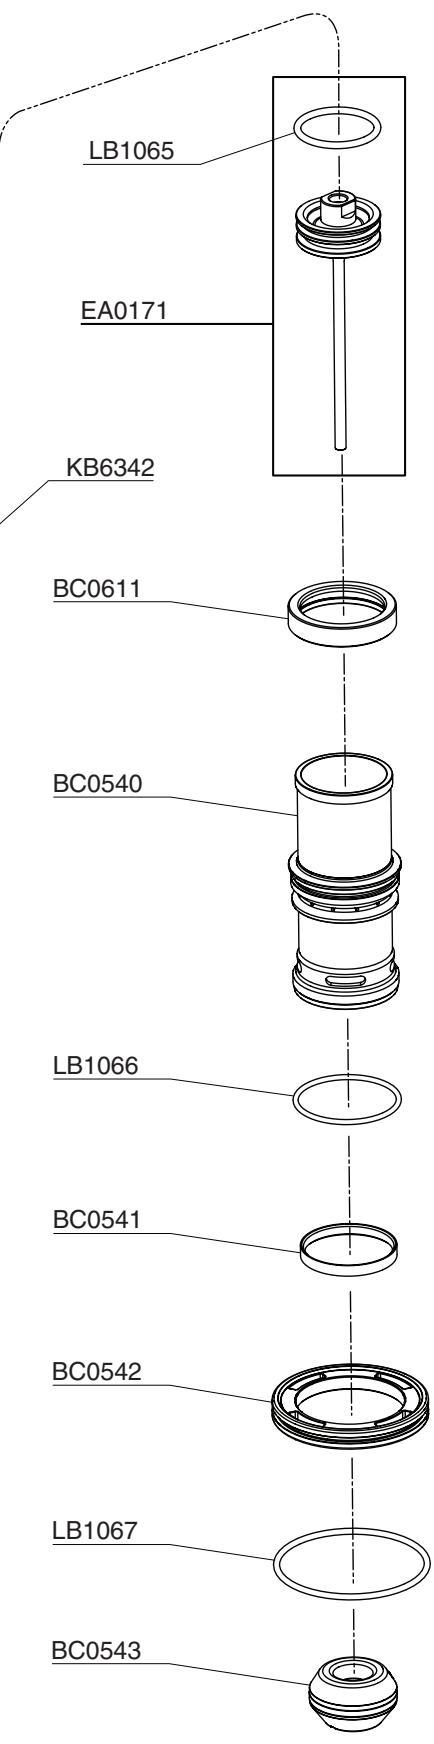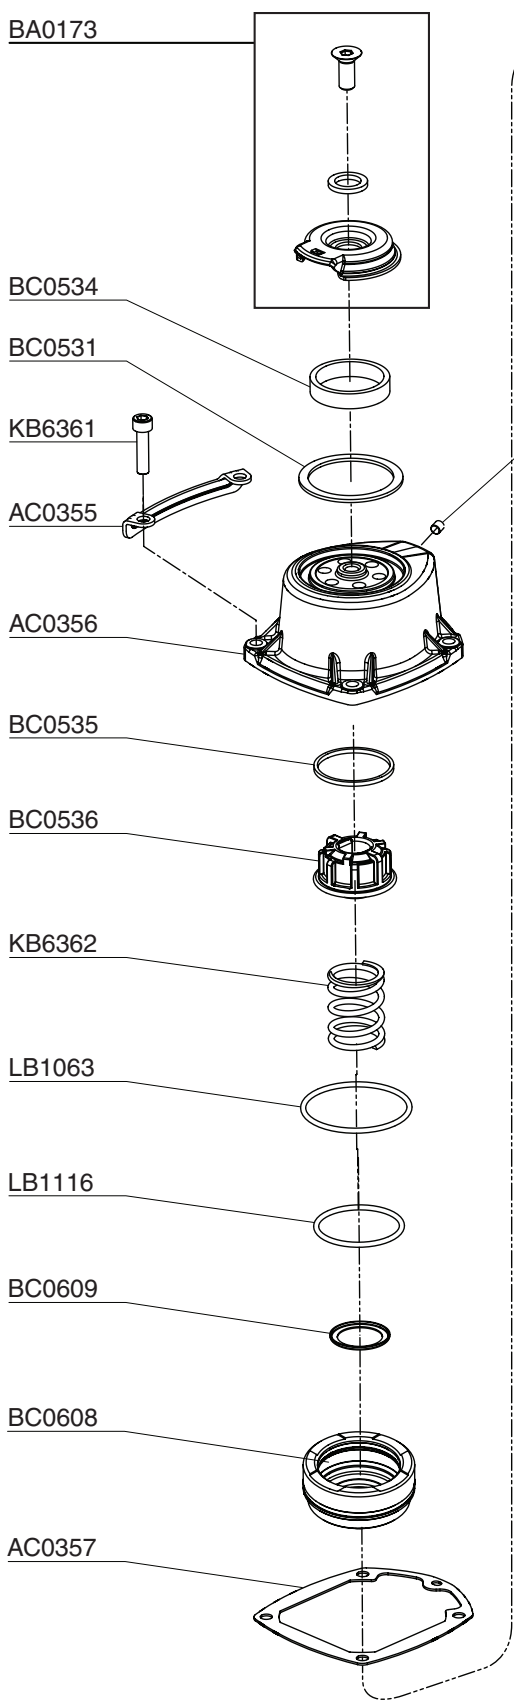

 
 

 
# 57mm Coilnailer

**PAL57F**

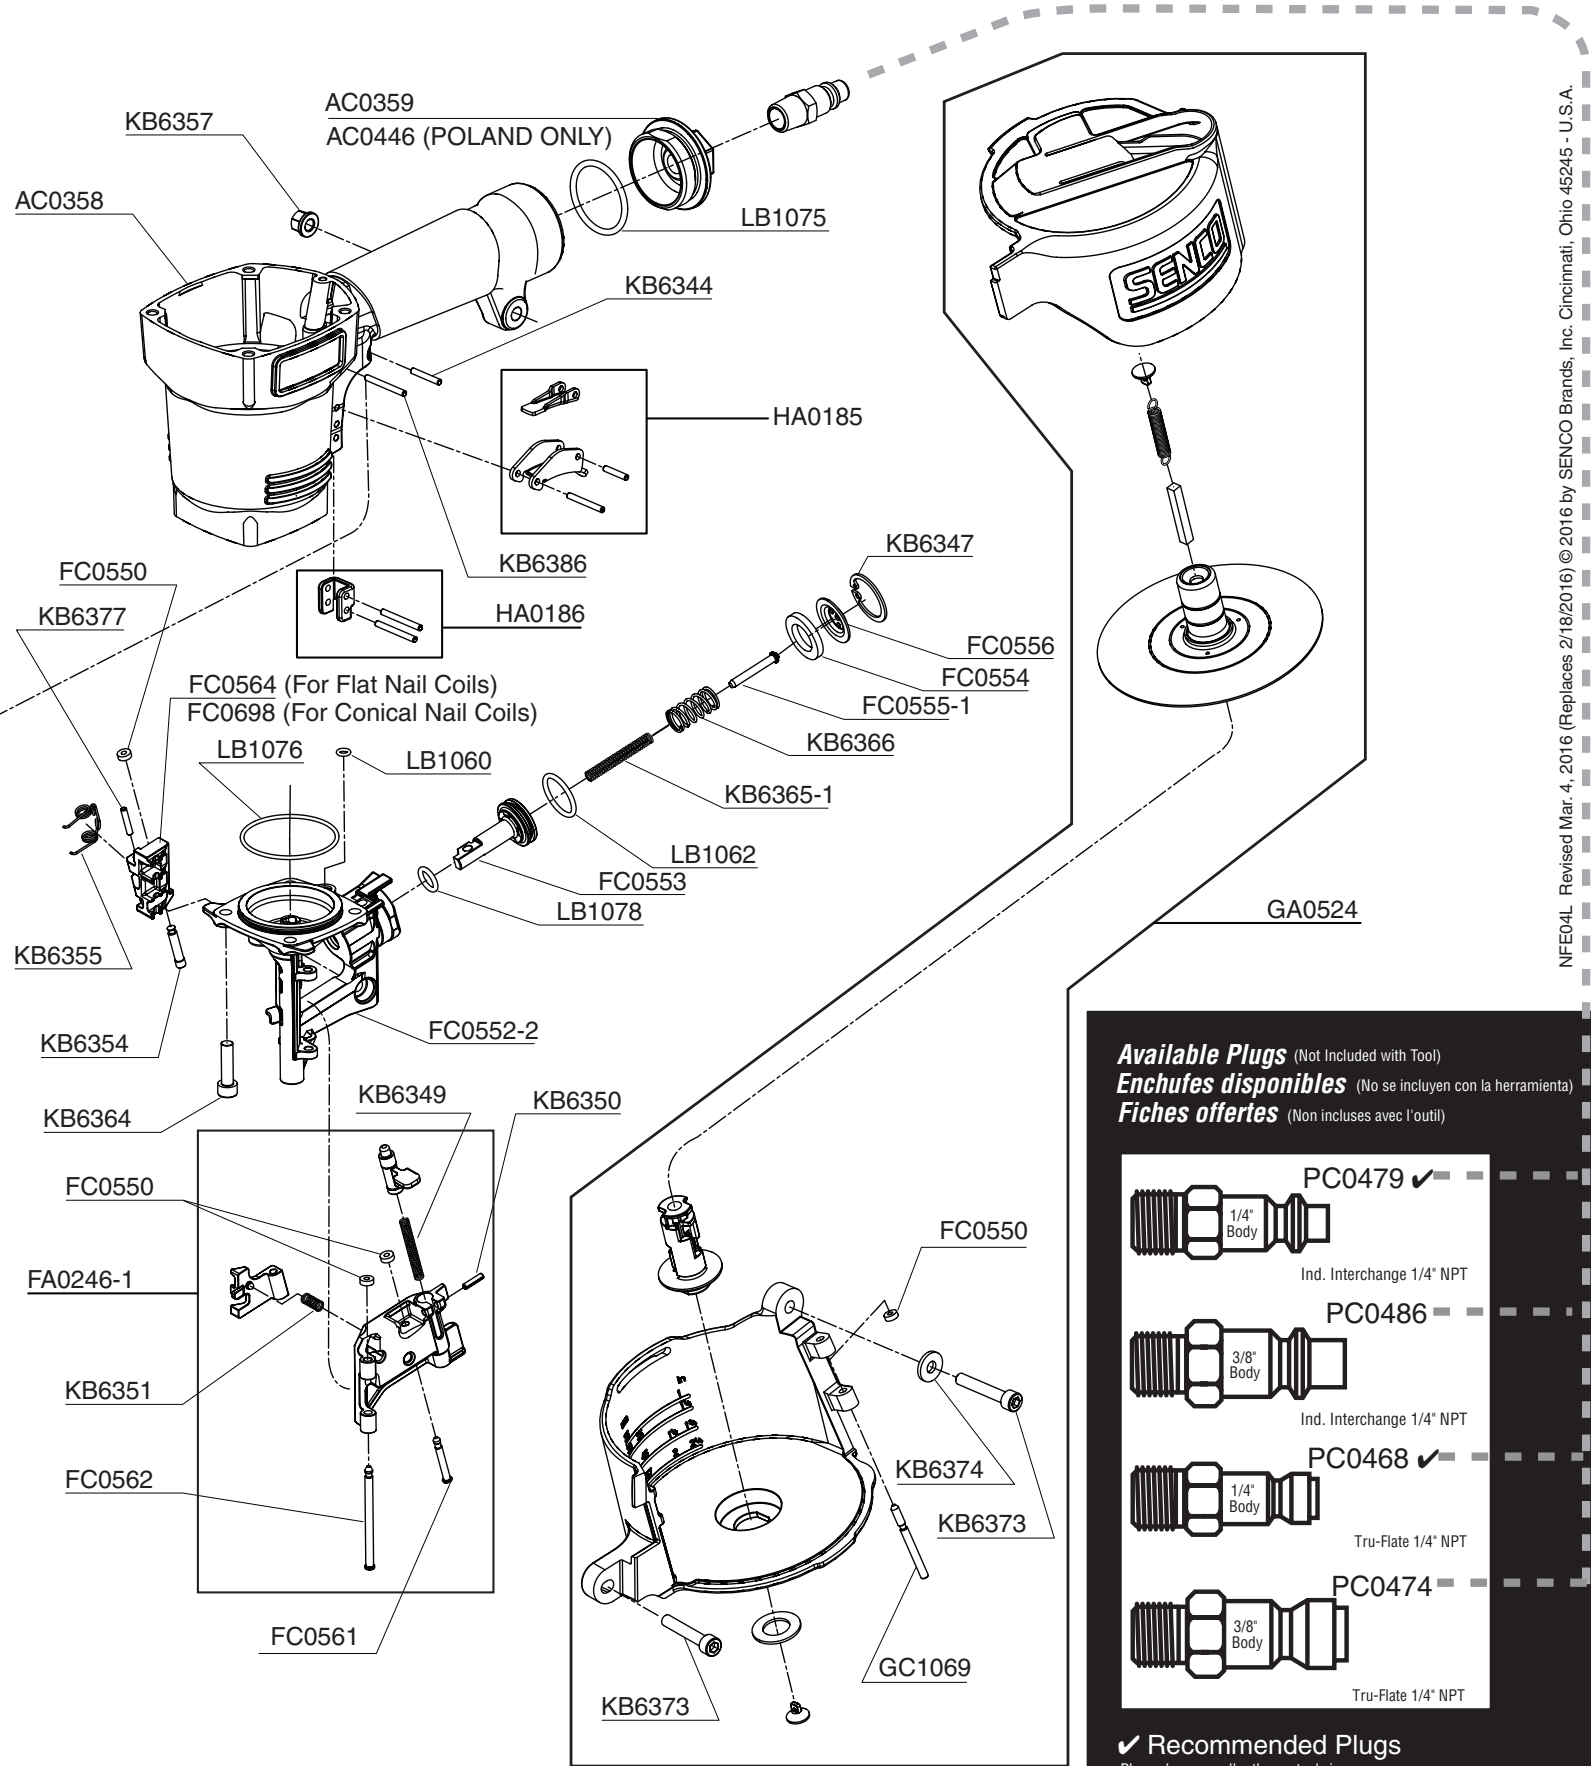

NFE04L Revised Mar. 4, 2016 (Replaces 2/18/2016) © 2016 by SENCO Brands, Inc. Cincinnati, Ohio 45245 - U.S.A.

**Available Plugs** (Not Included with Tool)  
**Enchufes disponibles** (No se incluyen con la herramienta)  
**Fiches offertes** (Non incluses avec l'outil)

- 
**PC0479** ✓  
 1/4" Body  
 Ind. Interchange 1/4" NPT
- 
**PC0486**  
 3/8" Body  
 Ind. Interchange 1/4" NPT
- 
**PC0468** ✓  
 1/4" Body  
 Tru-Flate 1/4" NPT
- 
**PC0474**  
 3/8" Body  
 Tru-Flate 1/4" NPT

✓ **Recommended Plugs**  
 Plugs shown smaller than actual size  
 ✓ **Enchufes recomendados**  
 Los enchufes se muestran más pequeños del tamaño real  
 ✓ **Fiches recommandées**  
 Les fiches illustrées sont plus petites que les formats réels

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • ERSATSTEILE-LISTE • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AC0355	WEAR GUARD	PLACA	BOUCLIER ANTIABRASIF
AC0356	CAP	TAPA	BOUCHON
AC0357	SEAL	SELLO	JOINT
AC0358	MAIN BODY	CARCASA	CORPS
AC0359	END CAP	TAPA	BOUCHON
AC0446	END CAP (POLAND)	TAPA	BOUCHON
BA0173	DEFLECTOR ASY	ASAMBLE DE DESVIADOR	DÉFLECTEUR D'ASSEMBLÉE
BC0531	SEAL	SELLO	JOINT
BC0534	MUFFLER	SILENCIADOR	SILENCIEUX
BC0535	SEAL	SELLO	JOINT
BC0536	SEAL	SELLO	JOINT
BC0540	CYLINDER	CILINDRO	CYLINDRE
BC0541	RING CYLINDER	ANILLO	ANNEAU
BC0542	SPACER	SEPARADOR	ENRETOISE
BC0543	STOP PISTON	TOPPE	ARRÊT
BC0608	VALVE	VALVULA	VALVE
BC0609	WASHER	ARANDELA	RONDELLE
BC0611	CYLINDER COLLAR	CILINDRO	CYLINDRE
CA0111	VALVE ASSEMBLY	ASAMBLE DE VALVULA	VALVE D'ASSEMBLÉE
EA0171	DRIVER ASY	PERCUSOR	COUTEAU
FA0246-1	LATCH ASY	ASAMBLE DE UÑETA	DOIGT DE RETUNUE D'ASSEMBLÉE
FC0550	RETAINER	JUNTA TÓRICA	RETENUE
FC0552-2	GUIDE BODY	PLACA DE NARIZ	FRONT
FC0553	PISTON FEED	PISTON	PISTON
FC0554	STOP	TOPPE	ARRÊT
FC0555-1	PIN	PASADOR	GOUPILLE
FC0556	CAP, FEED PISTON	TAPA	BOUCHON
FC0561	PIN	PASADOR	GOUPILLE
FC0562	PIN	PASADOR	GOUPILLE
FC0564	FEED PAWL	ALIMENTADOR	POUSSOIR
FC0565	COVER	CUBIERTA	COUVERCLE
FC0698	FEED PAWL	ALIMENTADOR	POUSSOIR
GA0524	MAGAZINE ASY	ASAMBLE DE CARGADOR	MAGASIN D'ASSEMBLÉE
GC1069	PIN	PASADOR	GOUPILLE
HA0185	TRIGGER ASSEMBLY	ASAMBLE DE GATILLO	GÂCHETTE D'ASSEMBLÉE
HA0186	SAFETY ELEMENT ASSEMBLY	ASAMBLE DE SEGURO	ENSEMBLE PALPEUR DE SÉCURITÉ
HA0203	COVER ASY	ASAMBLE DE CUBIERTA	COUVERCLE D'ASSEMBLÉE
HC0485	SAFETY ELEMENT	SEGURO	PALPEUR DE SÉCURITÉ
KB6342	SCREW	TORNILLO	VIS
KB6344	PIN	PASADOR	GOUPILLE
KB6347	RING	ANILLO	ANNEAU
KB6349	SPRING	RESORTE	RESSORT
KB6350	PIN	PASADOR	GOUPILLE
KB6351	SPRING	RESORTE	RESSORT
KB6354	PIN	PASADOR	GOUPILLE
KB6355	SPRING	RESORTE	RESSORT
KB6357	NUT	TUERCA	ECROU
KB6361	SCREW	TORNILLO	VIS
KB6362	SPRING	RESORTE	RESSORT
KB6364	SCREW	TORNILLO	VIS
KB6365-1	SPRING	RESORTE	RESSORT
KB6366	SPRING	RESORTE	RESSORT
KB6371	SPRING	RESORTE	RESSORT
KB6373	SCREW	TORNILLO	VIS
KB6374	WASHER	ARANDELA	RONDELLE
KB6377	PIN	PASADOR	GOUPILLE
KB6386	PIN	PASADOR	GOUPILLE
LB1060	SEAL	SELLO	JOINT
LB1062	SEAL	SELLO	JOINT
LB1063	SEAL	SELLO	JOINT
LB1065	SEAL	SELLO	JOINT
LB1066	SEAL	SELLO	JOINT
LB1067	SEAL	SELLO	JOINT
LB1075	SEAL	SELLO	JOINT
LB1076	SEAL	SELLO	JOINT
LB1078	SEAL	SELLO	JOINT
LB1116	SEAL	SELLO	JOINT